



RAIN[®]
R F I D

RAIN Communication Interface Guideline

**RAIN RFID Alliance
Guideline**

V.2.0
April 2019

RAIN RFID Guideline: RAIN Communication Interface (RCI)

The document is in part and in total owned and managed by the members of the RAIN RFID Alliance.

Copyright 2019 RAIN RFID Alliance

Licensed under the Apache License, Version 2.0 (the "License");
you may not use this file except in compliance with the License.

You may obtain a copy of the License at

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing,
software distributed under the License is distributed on an "AS
IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY
KIND, either express or implied.

See the License for the specific language governing permissions
and limitations under the License.

Contents

Revision history	4
Version 1 to Version 2	4
1 Introduction	5
2 Terminology	6
3 Interface description.....	7
3.1 Principles.....	7
3.2 Data exchange.....	8
3.3 Tag interrogation (inventory and access) method.....	9
3.3.1 Description	9
3.3.2 Event driven	9
3.3.3 Command driven.....	10
3.4 Tag interrogation (inventory and access) specifics.....	10
3.4.1 Inventory (PC, XPC, UII/EPC in binary)	10
3.4.2 Data interpretation	10
3.4.3 Basic write	13
3.4.4 Battery Assisted Passive (BAP) & Sensors tags	13
3.4.5 Cryptography enabled (Crypto) tags.....	13
3.4.6 Protocol control bits.....	13
4 Interface method	14
4.1 Message format	14
4.2 Command message format.....	14
4.3 Command response message format	15
4.4 Event report message format	15
4.5 Binary data	15
5 Interface media	16
5.1 General.....	16
5.2 Serial readers	16
5.3 IP Networked readers	17
6 Commands.....	17
6.1 GetInfo	17
6.2 SaveFields, ReadFields, DefaultFields, Reboot, ActivateUpdateMode.....	18
6.3 GetCfg, SetCfg	19
6.3.1 Message format	19
6.3.2 General reader configuration	20
6.3.3 Serial reader specific configuration	21

6.3.4	IP reader specific configuration	21
6.3.5	Spot report general configuration	22
6.3.6	Air protocol general configuration.....	22
6.3.7	Air protocol expert configuration	24
6.4	GetRZ, SetRZ, AddRZ, DelRZ.....	24
6.4.1	General.....	24
6.4.2	ReadZone fields.....	26
6.4.3	ReadZone triggers	27
6.5	GetGPIOs, SetGPIOs	28
6.6	GetProf, SetProf, AddProf, DelProf	29
6.6.1	General.....	29
6.6.2	SpotProfile fields	31
6.6.3	SpotProfile write fields.....	32
6.7	StartRZ, GetActRZ, StopRZ	33
6.7.1	General.....	33
6.7.2	ReadZone activation	34
6.8	ThisTag, ThisTagStop.....	34
7	Reports.....	35
7.1	Error event report.....	35
7.2	Heartbeat.....	35
7.3	Reader event report.....	36
7.4	Tag spot report.....	36
8	Proprietary functions	38
9	Reader documentation	38
Annex A	Abbreviations	39
Annex B	Error numbers and descriptions	40
Annex C	RAIN RFID 101	42
C.1	General tag types.....	42
C.2	Tag memory organisation	43
C.3	Air-protocol summary	44
C.4	Sessions and tag targets.....	45
C.5	Air protocol parameters.....	45
C.6	Tag passwords.....	45
Annex D	Tag spot example implementation.....	46
Annex E	Contributors	48
ABOUT RAIN RFID ALLIANCE		49

Revision history

Version 1 to Version 2

1. Non-technical editorial corrections.
2. Correct the selection masking description in 3.3.2.
3. Add ISO/IEC 20248 Interpretation.
4. Add a length field for error detection over serial communications.
5. Add a method to change the serial communication parameters.
6. 6.3.6: Specify the frequency dimension to be kHz.
7. Add a timestamp which is the epoch value of **DT** (date time) to assist with sensor data fusion in IoT systems.
8. Make **BootCnt** settable by moving it from 6.1 to 6.3.2.
9. Allow **Mode** and **TargetTags** to be specified for a **ThisTag** command, so settings could be altered for that operation, then returned to the previous settings once **ThisTag** was complete.
10. Ensure consistency with the field names for the identifiers of read zones and **SpotProfiles**. All now uses the field **ID**.
11. Add an optional sequence number to the **HB** report.
12. Add an optional command/respond **ID** number.
13. Remove mixed type arrays from reader reports, specifically **MB** in the **Spot** report.
14. Changed copyright date in front page.


1 Introduction

This document describes an application developer friendly interface between applications and RAIN RFID readers (interrogators). The interface has been designed to accommodate all RAIN RFID reading devices regardless of processing resource and is therefore applicable for a variety of use cases.

The underlying assumption is that the application of the interface is within a deterministic system. It is based on the principle that the application is designed to interact with a predetermined set of tags, in a predetermined manner and within a predetermined read zone. The interaction between the tag and the reader is reported to an application as an event known as a 'tag spot'. By applying this method readers can focus resources on application specific use-cases and it allows the efficient use of the RAIN air protocol in performing the necessary tasks of tag inventory, access and data interpretation. This interface allows differentiation of readers per use case and as such reader vendors are encouraged to optimise the devices for specific applications.

Note, the RAIN air protocol is specified by *ISO/IEC 18000-63* and *EPCglobal Gen2 Specification*.

The figure below, shows a high-level architecture of the interface. The diagram depicts an RCI (RAIN Communication Interface) compliant reader within a networked system.

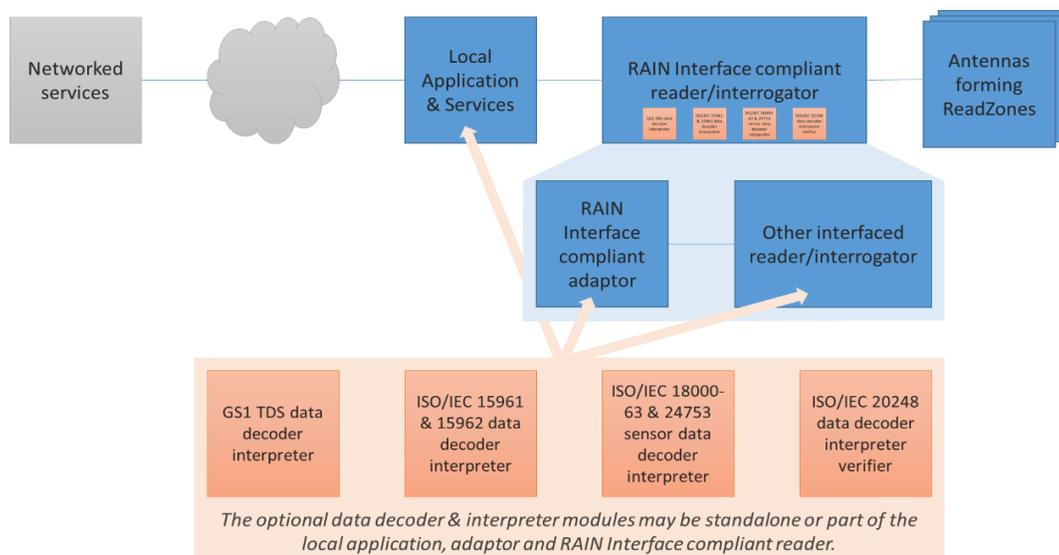

Tag data decoding and interpretation forms a key part of the RCI. Code modules to decode and interpret tag data may be used by the application, the adaptor or the reader. Interfaces to such code modules will be developed in harmony with this interface.

Readers compliant with the RAIN Communication Interface are configured and activated in the following way:

1. **Reader Configuration:** Configure the general parameters of the reader including any regulatory considerations.
2. **ReadZone Configuration:** Configure individual antenna parameters and combine them into logical read zones (**ReadZone**).
3. Configure **ReadZone Activation:** Configure the conditions with which each **ReadZone** will poll for tags. Activation can be triggered via time-based algorithms or external sensors.

4. Configure **SpotProfile**: create the **SpotProfile** configuration that will include the tags of interest, when and how tags should be accessed and the expected reporting parameters.
5. **ReadZone** Activation: Once all settings are configured, the **ReadZones** are activated. Tag **Spot** reports will be returned following each tag **Spot** event.

The interface has been designed to allow command driven access to tags and other reader functions including proprietary commands, command parameters and parameter values.

2 Terminology

A familiarity with the RAIN (both ISO/IEC and GS1) air protocol and associated data standards is assumed. The RAIN terminology is used. Other terms, if not defined, use the Oxford English definitions. This guideline uses the following terminology:

Term	Meaning
access or interrogate	The command and response actions to communicate with a tag in order to select, read, write and configure the tag in an open or secured state.
binary	A stream of bits. The binary data representation is specified in 4.5.
known tag or wanted tag	This interface uses the principle that a RAIN reader system is designed to identify specific RAIN tagged items. These tags are identifiable by means of the tag data structure and class data within the data structure. Examples of tags include the GS1 GTIN tag and the ISO/20248 anti-counterfeit parts tag. Specific tag level identification is achieved using item specific information in the tag. An unknown tag may be a wanted tag, for example un-programmed tags in a production environment. The SpotProfiles make provision to detect such tags.
RAIN Communication Interface (RCI)	This guideline.
read	The command/respond actions to obtain data from a tag.
reader (Rdr)	The device which communicates with the tag by a method of interrogation (sometimes known as an 'Interrogator').
ReadZone (RZ)	The desired area where tags will be accessed. One or more antennas can be combined to create a ReadZone ; in which case the reader will combine the data from all the ReadZone antennas for the Spot report.
Spot	The report of a tag interaction event recorded within a ReadZone . A Spot , as defined by a SpotProfile , may be the result of multiple reads, writes, accesses, and other commands as implemented by the reader.
SpotProfile (Prof)	A set of parameters instructing a reader which tags should be reported; it also includes instructions indicating timing, the method and the intenseness with which the instructions should be applied. A list of SpotProfiles is a 'to do' list for the reader.
tuple	A tuple is an ordered list of elements/values. Each element/value has a specific meaning.
write	The command and response actions used to record or change data on a tag.
<i>repetition</i>	,... indicates a repetition of the previous element one or more times. ... indicates a repetition of the previous element zero or more times.
<i>defined terms</i>	To prevent confusion, terms defined by this guideline are bolded when used in text.

3 Interface description

3.1 Principles

As an underlying principle of the RCI, it is assumed that applications know which tags the reader should expect, how to perform access on those tags and the desired outcome following the access activity with regards to the specific use case and scenarios. The application uses this knowledge to configure and instruct the reader to independently select, inventory and access tags. The result of such actions is reported unilaterally (event driven) by the reader.

The interface has been designed to be flexible in terms of the sophistication of systems it supports. It can be utilised with limited functionality readers intended for basic use cases (for example a single antenna serial-port interfaced reader used to read a tag when a physical button is pressed), whilst at the same time it can be used with a complex multi-antenna cryptographic reader system. The interface assists "out-of-the box" operability as no configuration is required. As such, the interface aims to be useful without the need of an SDK; a simple serial terminal will be able to display reader output and instruct the reader.

The air protocol complexity is contained within the reader while the interface has been designed to use an intuitive application development language. This is achieved by using fields (<field name>:<field value>) to communicate between the application and the reader. The same field pairs are used for both configuration of the reader parameters and for the reader to report command responses and events.

A key focus is placed on the outcome of an interrogation by making the reader responsible for optimizing and managing tag selection and access. This allows reader vendors to optimise readers for specific outcomes and use cases and enables device differentiation based on reader intelligence and performance.

Hardware vendors have the flexibility to provide readers with varying levels of functionality as all commands and fields, except basic reader information, basic configuration, and tag inventory, are optional. As such, a vendor has the flexibility as to which fields will be supported. To ensure consistency when readers are operating, all fields are assigned default values.

If the application is confronted with field values that are either not known or not supported, the following actions are taken:

1. A "field value" not set: The default value as specified in this guideline will be used.
2. A "field value" not supported or known: It will be reported as not supported.

Compliance with the interface method is mandatory to ensure future interoperability and interface expansion. The interface makes provision for proprietary commands, fields (parameters) and field values.

The interface provides the following functions:

1. Reader
 - a. Reader information and status
 - b. Reader configuration
 - c. Antenna configuration and grouping into read zones
 - d. Expert air protocol configuration
 - e. Reader heartbeat

- f. General purpose IO; simple binary switches and multi-values
 - i. Output value settings
 - ii. Input value report
 - iii. Input trigger antenna activation
- 2. Tag access
 - a. This release of the RCI guidelines:
 - i. Inventory (PC, XPC, UII/EPC and simple sensors in binary) with optional select
 - ii. SpotProfile directed tag access
 - iii. Command driven access using the ThisTag command
 - iv. Inventory interpretation (ISO AFI recognition and GS1 EPC)
 - v. Basic write
 - vi. Data interpretation: ISO/IEC 20248
 - b. Considerations for future RCI guideline releases:
 - i. Tag memory locking
 - ii. Passwords
 - iii. Data interpretation: ISO/IEC 15961 & 15962, ISO/IEC 18000-63 & 24753 and GS1 TDS
 - iv. Crypto
 - v. BAP & sensors
- 3. Proprietary functions, fields and field values, see 8.

3.2 Data exchange

The following applies:

1. The application instructs a reader with a command; the reader shall issue a report responding to the command.
2. The reader reports events unilaterally.

Note: It is possible that a command is issued when the reader is processing an event. The completion of the event takes priority potentially resulting in an ignored command. Applications should be designed to be resilient in the event of such a scenario.

The interface commands are:

1. GetInfo
2. SaveFields, ReadFields, DefaultFields, Reboot, ActivateUpdateMode
3. GetCfg, SetCfg
4. GetRZ, SetRZ, AddRZ, DelRZ
5. GetGPIOs, SetGPIOs
6. GetProf, SetProf, AddProf, DelProf
7. StartRZ, GetActRZ, StopRZ
8. ThisTag, ThisTagStop

The interface reports are:

1. Command responses
2. Error
3. Heartbeat
4. Event – reader event
5. Spot – tag access report

3.3 Tag interrogation (inventory and access) method

3.3.1 Description

Tags are selected, inventoried and accessed according to the vendor reader configuration, application reader configuration, and the **SpotProfiles**.

A **SpotProfile** tells the reader what additional interrogation actions are to be taken following the reading of the UII/EPC during inventory; it also describes how the interrogation is to be reported to the application. The **SpotProfile** indicates the effort with which the reader must attempt to complete the **SpotProfile** actions.

A **SpotProfile** is associated with specific tags by means of a selection mask. Tags inventoried but not matching a **SpotProfile** are counted and ignored.

Tags interrogated within a **ReadZone**, see 6.4, are reported as spots, see 7.4:

FirstSeen: The first time the tag is seen by the reader. FirstSeen reports the full interrogation as directed by the relevant SpotProfile.

LastSeen – optional: The tag has not been seen by the reader for a specified period of time (**LastSeen** timeout - **LastSeenTO**). The reader shall "forget" the tag following a **LastSeen** report. A reader shall report the tag as **LastSeen** when forced to remove it to make space in its memory for a more recently inventoried tag.

Seen – optional: The tag shall be reported after a periodic interval (**Seen** interval) if it is still seen by the reader OR when any tag volatile data has changed since the previous report, e.g. sensor data (a sensor data change is indicated by the sensor alarm bit in the XPC word).

Note: A tag's UII/EPC (including the PC word, optional XPC words and optional Simple Sensor Data) are read when it enters the read zone and while it remains in the read zone during the inventory process. The inventory process allows for some selection of tags.

3.3.2 Event driven

All the **SpotProfiles** are combined into a *ToDo* list and it is this list which determines when and how tags are inventoried and accessed.

Each **SpotProfile** contains a mandatory tag selection mask and a priority value. The reader shall use the SpotProfile with the highest priority to complete an inventoried tag interrogation and report such interrogations as **Spots**.

A tag matches a **SpotProfile**, see mask **MBmask** in 6.6.2, when

all the **MaskValues** of the specified masks have the same value as the value derived by a logical AND of the specified tag content with the specified **Mask**.

Note: Vendors may decide the length and number of memory bank masks to support. See Annex D for an example implementation.

The Application manages the reader's *ToDo* list of **SpotProfiles**; however, the *ToDo* list is optional. When the *ToDo* list is not supported one of the following shall apply:

- If **SpotProfiles** are not supported, then the default **SpotProfile** shall be used.
- If one **SpotProfile** is supported it shall be configured according to this document.

Note: The number of **SpotProfiles** supported is a key reader performance parameter which should be reported by the reader as part of the reader specification.

The default **SpotProfile** reports all UII/EPCs (not interpreted; i.e. in binary) inventoried as FirstSeen.

3.3.3 Command driven

The application may require immediate access to a specific tag or set of tags. This is facilitated with the **ThisTag** command, see 6.8. This command contains a list of **SpotProfiles** to be executed immediately within the **ThisTag** timeout period.

3.4 Tag interrogation (inventory and access) specifics

3.4.1 Inventory (PC, XPC, UII/EPC in binary)

The tag Inventory process provides the UII/EPC in binary. This is the simplest form of reading RAIN tags.

The ability to inventory a tag, distinguish between ISO and GS1 and report it as **FirstSeen** is a mandatory function.

The reader shall decode the PC word to determine if the data is encoded as ISO or GS1 and report **UII** for ISO encoding and **EPC** for GS1 encoding.

3.4.2 Data interpretation

3.4.2.1 General

Data interpretation is configured as part of a **SpotProfile**, see 6.6.2.

The data interpretation recommended implementation can be described as having two levels:

1. Inventory interpretation
2. Advance data interpretation as specified by ISO/IEC 15961 & 15962, ISO/IEC 20248 and GS1 TDS. In all cases the latest specifications shall apply.

The reader shall attempt to interpret the data read from the tag when **InterpretData**, see 6.6.2, is set to a value it supports. The interpretation specific configuration shall be supplied using the interpretation identifier as part of the **SpotProfile**. The format is as follow:

```
<interpreted data identifier>:<data interpretation configuration>
```

Example: "20248": {"DDDdataTagged": true, "Timezone": "+1000", "Language": "en" }

If a reader does not support the requested interpretation, then the reader shall send a field value error message listing the interpretations it supports.

Interpretation information and errors shall be provided within the **ResponseCode** value object. The response code number zero (0) shall indicate a successful data interpretation.

The guideline makes provision for the following data interpretations:

Identifier	Specification	Notes
"RAININV"	RAIN inventory	See 3.4.2.2 and 3.4.6
"20248"	ISO/IEC 20248	See 3.4.2.3

Interpreted data shall be inserted in the **Spot** report using the following format:

```
<interpreted data identifier>:{"ResponseCode":<response code>,
                                <interpreted data>}
```

with

```
"ResponseCode":{"Code":<Error code - Number>,
                "Desc":<Error description - String>}
```

Example: "20248": {"ResponseCode": {"Code":0, "Desc": "DigSig Verification accepted; No error"},
"DDDdataTagged": {...}}

Each Interpretation shall implement the specific specification error codes as per its standard specification. Where such error codes are not specified the following error codes shall be used:

Code	Desc
0	"OK"
1	"Failed"

The Interpretation value shall be set to **null** when the interpretation module fails or become not available.

Example: "20248":null

3.4.2.2 RAININV interpretation (ISO AFI recognition and GS1 EPC)

The RAININV data interpretation is enabled by including the object "RAININV":true in the value array of the field **InterpretData** of a **SpotProfile**. The default value for RAININV is **false**.

When inventory data interpretation is supported, the reader shall be able to detect and present the following data interpretations on the first level of the **Spot** report:

1. ISO AFI value using the "AFI":<AFI in HexString> field

Example: ":92":<ISO/IEC 20248 data>

2. GS1 EPC code using the EPC type specified in **EncodingType**, see 6.6.2.

Example: "SGTIN":<SGTIN binary value>

3. Simple sensor data when appended to the UII/EPC, see 3.4.4.
4. Protocol Control bit flags, see 3.4.6.

3.4.2.3 ISO/IEC 20248 (DigSig)

The RCI 20248 data interpretation shall comply with ISO/IEC 20248. This clause assumes a knowledge of ISO/IEC 20248 data presentations.

The 20248 data interpretation is enabled by including the field **20248** in the value array of the field **InterpretData** of a **SpotProfile**.

The 20248 data interpretation is configured using the following **20248** values (the default values are shown):

```
"20248": {"DDDdata": false,           # when true include DDDdata
          "SigData": false,          # when true include SigData
          "DDDdataTagged": true,      # when true include DDDdataTagged
          "DDDdataDisplay": false,    # when true include DDDdataDisplay
          "Timezone": "+0000",        # time zone offset in minutes
          "Language": "en"}          # language code per ISO/IEC 20248
```

The ISO/IEC 20248 interpreted data shall be reported in a **Spot** report using the following JSON object:

```
"20248": {"ResponseCode": <DigSig response code>,
          "DDDdata": {"DDDdata fields and values"},
          "SigData": {"SigData fields and values"},
          "DDDdataTagged": {"DDDdataTagged fields and values"},
          "DDDdataDisplay": {"DDDdataDisplay fields and values"}}
```

The fields **DDDdata**, **SigData**, **DDDdataTagged** and **DDDdataDisplay** shall be omitted when the associated **20248** configuration field value is set to false.

The following represents a complete Spot report example:

```
{ "Report": "TagEvent", "ErrID": 0,
  "DT": "2017-09-11T13:06:01.000",
  "TimeStamp": 687652641.324,
  "PC": ":8592",
  "UII": "wJgLT3UAawN5RRiWnEEAA==",
  "MB": [{"ID": 2, "Start": 0, "Data": "4sBokiAACwAeOqun"},
         {"ID": 3, "Start": 0,
          "Data": "IAG1kIrW9xoL_oRifldd7xrq4w0A_JDdn_z7t50ktMU"}],
  "20248": {
    "ResponseCode": {"Code": 0,
                    "Desc": "DigSig Verification accepted; No error"},
```

```

"DDDdataTagged":{
  "cid":107,
  "daid":"QC FVXX",
  "dauri":"https://da.fleetvalid.info",
  "license_plate":"569QS",
  "plate_placing":"REAR",
  "signature":"IAG1kIrW9xoL_oRifldd7xrq4w0A_JDdn_z7t50ktMU",
  "specificationversion":"ISO/IEC 20248:2018",
  "tid":"4sBokiAACwAeOqun",
  "timestamp":4752000,
  "vehicle_colour":"BLACK",
  "vehicle_shape":"COMPACT"}}}

```

The **ResponseCode** shall be a tuple of two values as per ISO/IEC 20248 Annex F *DigSig error codes*:

```

"ResponseCode":{"Code":<DigSig error code - Number>,
               "Desc":<DigSig error description - String>}

```

ISO/IEC 20248 supports the interpretation of partial data. Missing field values shall take the value null with the **ResponseCode** set to the appropriate error code (17, 18 or 19).

3.4.2.4 ISO/IEC 15961 & 15962, ISO/IEC 24753 and GS1 TDS

For future releases.

3.4.3 Basic write

The interface allows two write scenarios:

1. A tag or set of tags is written by the application after it was spotted. This is achieved with the **ThisTag** command.
2. The application expects a tag or set of tags to be spotted; it pipe-lines the write operation with a **SpotProfile**.

Sets of tags are handled with the **DwnCnt** field in the **SpotProfile**, which facilitates multiple use of the **SpotProfile**.

The result of a write operation shall be reported as a **FirstSeen**.

3.4.4 Battery Assisted Passive (BAP) & Sensors tags

For future releases.

3.4.5 Cryptography enabled (Crypto) tags

For future releases.

3.4.6 Protocol control bits

The air protocol control bits (PC) assist the reader to determine the type of tag and type of data stored in the tag. The extended air protocol control bits (XPC) contain indicator flags of tag use which may be important to the application, see ISO/IEC 18000-63 or EPCglobal Gen2 Specification.

When **RAININV** is set, these indicators shall be included in the **Spot** report with the following field:

```
"TagIndicator":<array of strings of tag indicators set in the tag XPC>
```

ISO/IEC 18000-63 XPC flag	RCI TagIndicator value
B (battery-assisted passive tag)	"BAP"
TN (tag notification)	"TAGNOTE"
U (untraceable)	"UNTRACEABLE"
K (killable)	"KILLABLE"
NR (nonremoveable)	"NONREMOVE"
H (Hazmat)	"HAZMAT"

4 Interface method

4.1 Message format

The guideline uses ISO/IEC 21778 JSON as the interface language. See www.json.org for the specification and www.jsonlint.com JSON data syntax verification.

All data is represented as a JSON object pair, called a "field", which is depicted by a string and a corresponding value separated by a colon ':' in the following manner:

```
<field name>:<field value>
```

The interface message is a single JSON object containing a set of fields terminated with an EOL. The interface message is by default unformatted JSON and therefore contains no whitespaces (see the JSON format).

```
{<message>}EOL
```

The reader shall be able to handle all types of EOL |= <LF>, <CR>, <LF><CR> or <CR><LF>.

The reader shall ignore all formatting whitespaces (see JSON format rules) received.

Replies from the reader shall use EOL = <CR><LF>.

The application may optionally request the reader to send formatted JSON, see 6.3.2.

Note: Communication buffer size limitations may necessitate multiple messages to complete a command or report.

4.2 Command message format

The command message has the following format:

```
{"Cmd":<command name>,"CmdID":<number>,<command parameter field>...}
```

CmdID is optional. The value is a number to uniquely identify a command instance. The reader shall, if capable, repeat **CmdID** and its value in the response message of the command instance.

Note 1: No meaning may be derived from, nor inserted by, the field order within the <command parameter fields>. The field order may change unpredictably along the data path.

Note 2: Messages shall contain only one command.

4.3 Command response message format

The reader shall respond to each command with the command specific report, see 6. It shall have the following format:

```
{ "Report":<command name>,  
  "CmdID":<number>,  
  "ErrID":<error number>,  
  "ErrDesc":<error description>,  
  "ErrInfo":<additional error information>  
  <command response field>...}
```

The **CmdID** and **ErrInfo** fields are optional.

4.4 Event report message format

An event report message, see 7, has the following format:

```
{ "Report":<report name>,  
  <event field>,...}
```

4.5 Binary data

Binary data is not natively supported by JSON. Therefore, within this interface, binary data shall be represented by a JSON string with one of the following two formats:

1. **HexString**: The character 0 to 9 and A to F (not case sensitive) shall be used to represent binary values 0000_2 to 1111_2 . The **HexString** is a continuum of 16-bit words (to align with the air protocol) presented as a string of 4 characters preceded by the colon (":"). A 16-bit word may be truncated on a 4-bit boundary.

Example: ":0123:4567:89AB:CDEF:0123:4567:89AB:CDEF" and ":92"

2. **Base64String**: The IETF RFC 4648 Base 64 URL shall be used.

Example: "ASNfZ4mrze8BI0VniavN7w=="

Note: In this guide the term "binary" indicates a binary representation by configuration. The use of **HexString** or **Base64String** specifies that specific representation.

Binary data shall be represented in big-endian on 16-bit words. With big-endian the most significant byte (MSB) value is at the lowest address. The other bytes follow in decreasing order of significance.

The Application shall configure the reader for the report message binary format. **HexString** is the default.

Applications and readers shall auto distinguish between **HexString** and **Base64String** by using the presence of the colon (":") character in the JSON string.

5 Interface media

5.1 General

The interface communicates over a point-to-point serial stream carrier media, e.g. an RS-232, Bluetooth, TCP/IP connection, or similar connection.

The interface is particularly well suited for use over web sockets (IETF RFC 6455).

5.2 Serial readers

Serial media is directly controlled by the application.

The default serial setting shall be:

- 115,200 bits per second,
- 8 bits, no parity,
- 1 stop bit, and
- no flow controls.

As serial connections can sometimes be unreliable, a cyclic redundancy check (**CRC**) and/or length (**Len**) field may be optionally added to the message. This is completed by setting the fields **UseCRC** and **UseLen** to true using the **SetCfg** command, see 6.3.3.

```
{<message>[, "CRC":<CRC as a JSON integer number>]
  [, "Len":<CRC as a JSON integer number>]}
```

Where a CRC is used, it shall be the CRC specified by ISO/IEC 18000-63. This is the 16-bit CRC-CCITT International Standard, ITU Recommendation X.25 using the polynomial $x^{16} + x^{12} + x^5 + 1$.

The CRC shall be calculated starting with the first "{" to the end of the <message> excluding the ",".

Example: {"Cmd": "GetInfo", "Fields": ["ALL"], "CRC": 366}

with the CRC calculated over {"Cmd": "GetInfo", "Fields": ["ALL"]}

The length shall be calculated over the full length of the message including the EOL, since it is easy to add the length of the length field and its value. This shall represent the number of bytes received from the serial port.

```
Example: {"Report": "TagEvent", "MB": [[2, 0, "E280:1105:2000:3693:E0D8:0012"],
  [3, 0, "0531:57BA:5BDB:67B3:B28F:7DA9:4944:FCDD:C509:FDA0:BBB7:D45A
  :1C49:C4B0:6A62:28A6"]], "UII": "0B4F:7500:6B12:199D:39C7:4104:7800",
  "Timestamp": 1540208055.450914, "PC": "4592:C098", "ErrID": 0,
  "DT": "2018-10-22T11:34:15.450914", "Len": 303}
```

5.3 IP Networked readers

TCP/IP shall be used when connected to an IP network. Note reader discovery and address resolution are beyond the scope of this guideline.

Note: Support for other types of networks is to be determined.

6 Commands

6.1 GetInfo

Reader information and status cannot be set by the application. The information can be obtained by the application using the following command, or by adding the desired information and status fields to a periodic **Heartbeat** report.

```
{"Cmd":"GetInfo","Fields":<array of requested information fields>}
```

Example:

```
{"Cmd":"GetInfo","Fields":["RdrModel","Version"]}
```

The reserved field name "ALL" requests all information fields with their respective values:

```
{"Cmd":"GetInfo","Fields":["ALL"]}
```

The reader shall support **GetInfo(All)** as specified above. **GetInfo** for selective fields is optional.

On success the reader shall respond with:

```
{"Report":"GetInfo",<error fields>,<requested information field>...}
```

The following table lists the information fields. Optional fields are indicated by a †.

Field name	Value type	Notes
AirProtSet	String	A description of the values and legal combinations for the air protocol settings of this specific reader, see 6.3.7.
FreqRegSet	An Array of Strings	The FreqRegulation settings available on this reader. Example: ["AU9HA","AU9FA","EU8FA","EU8FB","EU9A"]
RdrBufSize	Number	The readers receive buffer size. Messages that are too large to fit in the receive buffer shall be ignored. The value of ReaderBufSize shall be at least 256 bytes with a value of zero meaning an unlimited size.
RdrModel	String	Vendor specific with product hardware version.
RdrSN	String	Vendor specific product serial number.
RdrTemp†	Number	Reader temperature in Celsius.
RdrTempPA†	Number	Reader power amplifier temperature in Celsius.

Field name	Value type	Notes
ReadErrors†	Number	The number of read errors since the value was last read with a Config command or sent in a Heartbeat ; e.g. partial reads, timeouts.
Reads†	Number	The number of reads executed since the value was last read with a Config command or sent in a Heartbeat .
Version	String	Vendor specific firmware version.
WriteErrors†	Number	The number of write errors since the value was last read with a Config command or sent in a Heartbeat .
Writes†	Number	The number of writes executed since the value was last read with a Config command or sent in a Heartbeat .

6.2 SaveFields, ReadFields, DefaultFields, Reboot, ActivateUpdateMode

It is recommended that readers should store all settings in non-volatile memory.

SaveFields: Saves the current field settings to non-volatile memory thereby obtaining assurance that the settings are available after power-off and power-on, and the reader will start as configured.

```
{"Cmd":"SaveFields"}
```

On success the reader shall respond with:

```
{"Report":"SaveFields",<error fields>}
```

ReadFields: Reads field settings from non-volatile memory thereby obtaining assurance that all the fields are set with the saved settings.

```
{"Cmd":"ReadFields"}
```

On success the reader shall respond with:

```
{"Report":"ReadFields",<error fields>}
```

DefaultFields: Sets all the fields to the default values. This includes the deletion of all **ReadZone** and **SpotProfile** objects.

```
{"Cmd":"DefaultFields":""}
```

Note: This command shall NOT change the non-volatile memory, allowing the restoration of the saved settings.

On success the reader shall respond with:

```
{"Report":"DefaultFields",<error fields>}
```

Reboot: This command reboots the reader. The outcome shall be the same as when a reader is powered down and then powered up.

```
{"Cmd":"Reboot"}
```

The reader shall respond with:

```
{"Report":"Reboot",<error fields>}
```

After which the reader shall reboot.

ActivateUpdateMode: This command puts the reader in a firmware update mode. The issue of this command shall NOT change the firmware, but only readies the reader for a firmware update. It is recommended that the reader escapes this state by either receiving a firmware update or by timeout, after which the reader reboots.

Note: Some devices require a hardware intervention to switch to upgrade mode. This command will NOT work in those cases.

The method of firmware update is vendor specific.

```
{"Cmd":"ActivateUpdateMode"}
```

The reader shall respond with:

```
{"Report":"ActivateUpdateMode",<error fields>}
```

where after, if there are no errors, the reader shall go into update mode.

6.3 GetCfg, SetCfg

6.3.1 Message format

A reader's general functions are configured using the fields in the tables below. All these fields are optional. The default values shall apply where the field is not used in the specific RCI implementation or not set by the application.

These commands manage the reader global settings.

GetCfg has the same format and operation as **GetInfo**, see 6.1.

SetCfg has the following format:

```
{"Cmd":"SetCfg",<configuration field (name and value) to be set>...}
```

On success the reader shall respond with:

```
{"Report":"SetCfg",<error fields>}
```

Note: The reader may set a value to an appropriate approximate when the exact configuration value is not supported by the reader. This shall be indicated in the error fields.

6.3.2 General reader configuration

The following fields are general reader settings:

Field name	Value type	Default	Notes
AppBufSize	Number	0	The maximum message size (in bytes) for messages that the reader sends to the application. The value of AppBufSize shall be at least 256 bytes. Zero indicates unlimited.
Binary	"HEX" or "BASE64"	"HEX"	Selects the binary format. Note: Some fields only use the HEX format. Those fields using binary format are explicitly noted.
BootCnt	Number	-	This integer increments with every reboot. The size of this number is vendor specific (but should be at least 8 bits long); therefore, once the limit has been reached, the counter will restart.
DateTime	String	-	Set the reader date and time using the ISO 8601 format: YYYY-MM-DDThh:mm:ss.sssZ No time zone means local time. Note a reader without a real-time clock will start at epoch-zero. Not setting the date-time will therefore indicate "up-time" of the reader, which is easily detectable due to its very low epoch value. Note fraction setting of date-time will ensure proper time synchronisation.
FormatReports	Boolean	False	When set to true, JSON compliant whitespaces are added to improve the human readability of the report message.
HBFields	Array of strings	["RdrName"]	Fields listed here shall be included in the Heartbeat , see 7.2.
HBGPIOs	Array of numbers	[]	Report the specified GPIOs within the Heartbeat , see 6.5.
HBPeriod	Number	0	Set the heartbeat period in seconds. Only the start beat is sent if set to zero.
RdrDesc	String	""	The description of the reader. Example: "Mouse trap reader – configuration controlled by the mouse trap manufacturing system"
RdrLocality	String	""	Description of reader position. Example: "Dock door 3"

Field name	Value type	Default	Notes
RdrName	String	<Company name>- <six hex digit random number>	Defines a unique name for this reader. RdrName should be used with reader discovery. A networked reader should use the last six hex digits of the MAC address for the random number. Example: company-2FEF88
RdrStart	"ACTIVE" or "NOTACTIVE"	"NOTACTIVE"	The ACTIVE setting instructs the reader to execute, at startup, the equivalent of ReadFields and StartRZ(ALL) . The NONACTIVE setting instructs the reader to wait for application commands.
ReportErrDesc	Boolean	False	When available, this will add the error description into the report.

6.3.3 Serial reader specific configuration

The following field is used with serial readers:

Field name	Value type	Default	Notes
UseCRC	Boolean	False	See 5.2.
UseLen	Boolean	False	See 5.2.
SerCfg	A tuple	[115200,8,"n",1,"n"]	The serial communication settings: <ul style="list-style-type: none"> • BAUD, • character bits, • parity ("n": none, "o": odd and "n": even), • stop bits, • flow control ("n": none, "r": CTS/RTS and "x": XON/XOFF).

6.3.4 IP reader specific configuration

The following fields are used with IP readers:

Field name	Value type	Default	Notes
DHCP	Boolean	True	If no IP is specified, then DHCP shall be set to true.
IPAddr	String	Configured by the vendor	See IP configuration. Note: Code objects can distinguish between IPv4 and Ipv6. The vendor should label the reader with the default values.
IPGateway	String	As IPAddr	As IPAddr
IPMask	String	As IPAddr	As IPAddr
IPPort	Number	As IPAddr	As IPAddr

6.3.5 Spot report general configuration

The following fields specify the general parameters for **Spot** report creation, see 7.4:

Field name	Value type	Default	Notes
LastSeenTO	Number	1000	Milliseconds. A LastSeen report is sent when a tag has not been seen for this duration.
SeenInterval	Number	1000	Milliseconds. The interval on which the Seen Spot report is sent.
SpotAnt	Boolean	false	Report the antenna number resulting in the Spot .
SpotDT	Boolean	false	Report the date-time timestamp of the Spot in a human readable format using the field "DT".
SpotInvCnt	Boolean	false	Report the inventory count of the Spot .
SpotPhase	Boolean	false	Report the phase of the tag access event resulting in the Spot . FirstSeen : The phase of the inventory. Seen & LastSeen : The phase of the last tag access.
SpotProf	Boolean	false	Report the SpotProfile number resulting in the Spot .
SpotRange	Boolean	false	Report the distance from the reader to the tag of the tag access event resulting in the Spot. FirstSeen : Initial distance. Seen : Current distance LastSeen : Last distance.
SpotRSSI	Boolean	false	Report the RSSI of the tag access event resulting in the Spot . FirstSeen : The RSSI of the inventory. Seen & LastSeen : The RSSI of the last tag access.
SpotRZ	Boolean	false	Report the ReadZone ID resulting in the Spot .
SpotTS	Boolean	false	Report the date-time timestamp of the Spot as the epoch unsigned integer using the field TimeStamp .
ThisTagTO	Number	1000	Milliseconds. The maximum duration of ThisTag .

6.3.6 Air protocol general configuration

The following fields configure the air protocol:

Field name	Value type	Default	Notes
Channel ¹	Number	0	Select the channel when a fixed frequency regulation method is selected. Zero (0) indicates the reader shall chose the channel.

Field name	Value type	Default	Notes
Freq ¹	Number	0	Set the centre frequency when a fixed frequency regulation method is selected. The frequency shall be set in kHz as an integer value. Zero indicates the reader shall choose the frequency.
FreqReg ¹	String	Configured by the vendor	See FreqRegSet in 6.1.
Mode	"AUTO", "DRM", "HDR" or "MONITOR"	"AUTO"	AUTO means the reader uses its default operating mode. DRM means the reader uses an operating mode compliant to GS1 Dense Reader Mode spectral mask requirements. This is recommended when many readers are operating in the same area. HDR means the reader uses an operating mode for High Data Rates for better performance with small tag populations and in environments with few readers. MONITOR means the reader uses an operating mode to monitor slow changing populations of tags. Note: Mode selection will result in a reader setting vendor-defined default values for Session, Target, Q, Tari, BLF, Modulation, DataEncoding, and Preamble.
TargetTags	Array of String containing "ALL" or a combination of: "SIMPLE", "READ", "WRITE", "BAP", "SIMPLESENSOR", "SENSOR", "CRYPTO"	["ALL"]	This field indicates the types of tags the application is interested in. This assists the reader intelligence. SIMPLE : Tags are only inventoried. READ : Tags inventoried also require data to be read from them. WRITE : Tags inventoried also require data to be written to them. BAP : Battery assisted tags may be in the read zone. SIMPLESENSOR : Tags may provide simple sensor data. SENSOR : Tags may provide sensor data. CRYPTO : Crypto tags may be in the read zone.



Note 1: It is important that the local frequency regulations are adhered to. This is the responsibility of the vendor, the integrator and the operator of the reader. This interface guideline and information available on the RAIN Alliance website provides guidance only. The RAIN Alliance does not take any responsibility in event of contravention of regulations.

6.3.7 Air protocol expert configuration

The following fields are intended to be used by experts who fully understand the air protocol.

Note: Certain combinations of settings may contravene local regulations. The field **AirProtSet**, see 6.1, provides guidance.

These settings are typically set by the vendor according to the **Mode** field, **TargetTags** field and **ReadZone** configurations, and intelligence in the reader.

Field name	Value type	Default	Notes
BLF	Number	Set by Mode	Used to override the value for the reader set by Mode. The value is in the range 40 to 640. The reader shall set and report the closest appropriate value.
DataEncoding	"FM0", "M2", "M4", "M8", "M16", "M32", or "M64"	Set by Mode	Used to override the value for the reader set by Mode. The reader shall set and report the value. Note: M16 , M32 and M64 imply the use of Flex Query instead of Query and only apply to Battery Assisted Powered tags.
Modulation	"DSB-ASK", "SSB-ASK" or "PR-ASK"	Set by Mode	Used to override the value for the reader set by Mode. The reader shall set and report the value.
Preamble	"SHORT" or "LONG"	Set by Mode	Used to override the value for the reader set by Mode. The reader shall set and report the value.
Tari	Number	Set by Mode	Used to override the value for the reader set by Mode. The value is in the range 6.25 to 25. The reader shall set and report the closest appropriate value.

6.4 GetRZ, SetRZ, AddrZ, DelRZ

6.4.1 General

The following commands and fields configure the read zones. A read zone (**ReadZone**) is the desired space in which tags are inventoried and the desired (as specified by the **SpotProfiles**) tags are accessed. Tags accessed are reported as **Spots** within a **ReadZone**.

ReadZones are defined with one or more antennas. A **ReadZone** uses specific power settings and duty cycles to achieve the most efficient tag access results. These settings may apply to individual antennas within a **ReadZone**.

Antenna and **ReadZone** identification numbers shall be positive integers. The following applies:

- **Antennas** shall be numbered from one (1) by the vendor.
- **ReadZones** shall be numbered from one (1).

The default setting for read zones is one **ReadZone** (number 1) containing all the antennas of the reader.

Note: A reader may support no **ReadZones**; the above defaults apply. A reader may also support a singular **ReadZone** in which case only **GetRZ** and **SetRZ** can be used. In this case the **ID** field may be omitted and/or ignored since the default value of 1 for **ID** shall apply.

Note: The **ReadZone** list may be implemented as a fixed or variable list. The command makes provision to manage both methods.

GetRZ: Obtains the fields and values of a **ReadZone**.

```
{"Cmd":"GetRZ",
 "ID":<the id of the requested ReadZone>}
```

On success the reader shall respond with:

```
{"Report":"GetRZ",<error fields>,
 <requested ReadZone fields, see 6.4.2 and 6.4.3>}
```

SetRZ: Sets the field values of a **ReadZone**. Fields not changing may be omitted.

```
{"Cmd":"SetRZ",
 "ID":<ReadZone ID - the default is 0 meaning all>,
 <ReadZone fields and values to be set>}
```

Note: {"Cmd":"SetRZ", "ReadPwr":20.0} shall set all the ReadZones' read power to 20.0 dBm.

On success the reader shall respond with:

```
{"Report":"SetRZ",<error fields>}
```

AddRZ: Add a **ReadZone** record. Only non-default fields need to be included. The **ReadZone ID** may be omitted or set to zero, in which case the reader shall assign a number.

```
{"Cmd":"AddRZ",
 <ReadZone to be added; fields and values>}
```

On success the reader shall respond with:

```
{"Report":"AddRZ",<error fields>,
 "ID":<the ID of the added ReadZone>}
```

DelRZ: Delete **ReadZone** objects.

```
{"Cmd":"DelRZ",
 "ID":[<list of the ReadZone IDs for deletion; 0 is not allowed>]}
```

The default **ReadZone ID** 0 is not allowed.

Note: This prevents the accidental deletion of all the **ReadZones**.

On success the reader shall respond with:

```
{"Report": "DelRZ", <error fields>}
```

6.4.2 ReadZone fields

The following table lists fields for defining a **ReadZone**.

Field name	Value type	Default	Notes
ID	Positive number	-	The read zone identification number.
Ants	An array of Positive numbers	[0]	Antennas may be in one or more ReadZone . [0] indicates all antennas.
ReadPwr	Number	0.0	Value is in dBm correct to one tenth (0.1 dBm).
WritePwr			
DutyCycle	An array of 3 non-negative values	[0,0,0]	The values of the array specify: <ul style="list-style-type: none"> the start delay (ms), ON duration (ms), and OFF durations (ms). Note: Vendors may dynamically adjust the timing to ensure proper completion of an air protocol communication.
ReadPwrAnt	An array of numbers	All the values in the array are 0.0	The position of the value corresponds with the antenna list. Value is in dBm correct to one tenth (0.1 dBm).
WritePwrAnt			
DutyCycleAnt	An array of arrays of 3 non-negative numbers	[[0,0,0]]	The position of the values corresponds with the antenna list. The values of the array specify: <ul style="list-style-type: none"> the start delay (ms), ON duration (ms), and OFF durations (ms). Note: vendors may add a dwell to ensure proper completion of an air protocol communication.
StartTrigger	An array of trigger tuples	[[]]	See 6.4.3. When no StartTrigger is defined then the ReadZone shall read tags from when the ReadZone is started, see 6.7. When one or more StartTriggers are specified then the ReadZone shall start reading tags after the ReadZone was started and any of the StartTriggers was detected.

Field name	Value type	Default	Notes
StopTrigger	An array of trigger tuples	[[[]]]	See 6.4.3. The ReadZone shall stop reading tags when the ReadZone is stopped, see 6.7. When one or more StopTriggers are specified then the ReadZone shall stop reading tags on detection of any of the StopTriggers . The ReadZone shall remain in the active (started) state.
Q	Number	Set by vendor values for a specific Mode	Used to override the value for the reader set by Mode. The integer value is in the range 0 to 15.
Session	Number	0	Define the session to be used in this ReadZone .
Target	"NONE", "A", "B" or "AB"	"NONE"	Select tags using a target.
SelectFlag	"NONE", "SL" or "~SL"	"NONE"	Select tags using the selected flag.

6.4.3 ReadZone triggers

A trigger is a GPIO input switch which is used to enable and disable the spotting of tags within an active **ReadZone** (see 6.7 for **ReadZone** activation). The **ReadZone** fields specifies how the tags will be spotted (duty cycles, power levels, antennas, etc).

Each trigger is specified with a tuple of 4 values as in the following table:

Field name	Value Type	Notes
InputID	Number	The ID of the GPIO input to be used for the trigger. An InputID of 0 indicates ALL inputs.
Delay	Number	The trigger execution delay in milliseconds.
RisingEdge	Boolean	True for rising edge, false for falling edge.
TriggerState	-1, 0, 1	The trigger execution only takes place when, at the time of the execution: 1: the TriggerState is SPOTTING-STARTED -1: the TriggerState is SPOTTING-STOPPED 0: the last trigger executed was either

When **ReadZone** triggers are defined then the **StartRZ** command shall set the **TriggerState** to SPOTTING-STOPPED.

Note 1: Vendors should use appropriate dwell to ensure that air protocol commands are completed.

Note 2: Duty cycles are handled in the **RZ** specification and the **RZ** must be active for the triggers to have effect.

Note 3: Duty cycle (**ReadZones** and **Antennas**) synchronisation and antenna power matching is left for the vendor and must be encapsulated inside the reader.

Examples:

1. Spot tags while a button is held, or an IR beam is broken (for example using Input 1).

```
"StartTrigger": [[1,0,true,0]]
```

```
"StopTrigger": [[1,0,false,0]]
```

2. Read for a 2 seconds duration after an IR beam was broken.

```
"StartTrigger": [[1,0,true,0]]
```

```
"StopTrigger": [[1,2000,true,0]]
```

3. Start spotting tags when the button is pressed, and then stop when it pressed again.

```
"StartTrigger": [[1,0,true,-1]]
```

```
"StopTrigger": [[1,0,true,1]]
```

4. Start spotting tags when either IR beam 1 or 2 is broken, and then stop 1 second after either IR beam 3 or 4 is broken.

```
"StartTrigger": [[1,0,true,-1],[2,0,true,-1]]
```

```
"StopTrigger": [[3,1000,true,1],[4,1000,true,1]]
```

Depending on the physical configuration the following will also work:

```
"StartTrigger": [[1,0,true,0],[2,0,true,0]]
```

```
"StopTrigger": [[3,1000,true,0],[4,1000,true,0]]
```

6.5 GetGPIOs, SetGPIOs

GetGPIOs, **SetGPIOs** and **RdrEvent** is used to set, get, and report on GPIOs. Two types of outputs are catered for: switches and values (typically analogue to digital convertors or control registers).

Switches can be set to **ON** or **OFF**. **ON** means signal-active or closed-circuit. The default is **OFF**.

Each **GPIO** shall be identifiable by a vendor-specified unique positive integer number.

GPIOs configurable for input and output shall be numbered independently for input and output. The interface shall NOT provide a method to configure the direction of a **GPIO**.

GetGPIOs: Obtains the values of the listed **GPIOs** in the same order as the request list. The **GPIO** identifier 0 (**ALL**) will result in the values of all the available **GPIOs** to be reported. **GetGPIOs** also configure when to report the values.

```
{ "Cmd": "GetGPIOs", "ReportNow": [<GPIO ID>...],  
  "ReportEvent": [<GPIO ID>...],  
  "ReportHB": [<GPIO ID>...] }
```

Note: Any of the lists may be omitted or not supported. For **RdrEvent** see 7.3 and **ReportHB** see 7.2.

Example:

```
{"Cmd":"GetGPIOs","ReportNow":[1,3,4],"ReportEvent":[2]}
```

On success the reader shall respond with the **ReportNow** GPIO tuples:

```
{"Report":"GetGPIOs",<error fields>,  
"GPIOs":[[<GPIO ID>,<GPIO type>,<GPIO value>]...]}
```

With

GPIO	GPIO type	GPIO value
Input	"IN"	Boolean – false → (OFF), true → (ON)
Output	"OUT"	Boolean – false → (OFF), true → (ON)
Analogue 2 Digital	"A2D"	HexString
Digital 2 Analogue	"D2A"	HexString
Register	"REG"	HexString

Example:

```
{"Report":"GetGPIOs","ErrID":0,  
"GPIOs":[[1,"IN",true],[2,"A2D",":12"]]}
```

SetGPIOs: Sets the GPIO values. The command assumes the application knows the **GPIO** types by using the **GetGPIOs** command. A **GPIO** is set using a tuple of 3 values; the **ID**, the new value and a toggle duration in milliseconds. The default toggle duration value is zero (0) and is interpreted as indefinitely. When the toggle value is non-zero then the GPIO shall switch to the new value and return to the old value after the duration. If the current and new value is the same, then an error is reported.

```
{"Cmd":"SetGPIOs","GPIOs":[<GPIO set tuple>...]}
```

Example where **GPIO 1** is a switch and **5** is a register:

```
{"Cmd":"SetGPIOs","GPIOs":[[1,true,500],[5,":A345",0]]}
```

The reader shall respond with:

```
{"Report":"SetGPIOs",<error fields>}
```

6.6 GetProf, SetProf, AddProf, DelProf

6.6.1 General

The **GetProf**, **SetProf**, **AddProf** and **DelProf** commands manage the **SpotProfile** list.

SpotProfiles shall be numbered with a positive integer. The **SpotProfile** number zero (0) shall mean **ALL**.

GetProf: Obtains the fields and values of a **SpotProfile**.

```
{"Cmd":"GetProf",  
  "ID":<number of the requested SpotProfile>}
```

On success the reader shall respond with:

```
{"Report":"GetProf",<error fields>,  
  <requested SpotProfile fields>}
```

See 6.6.2 and 6.6.3 for more information about **SpotProfile** fields.

SetProf: Sets the field values of a **SpotProfile**. Fields not changing may be omitted.

```
{"Cmd":"SetProf",  
  "ID":<SpotProfile ID - the default is 0 meaning all>,  
  <SpotProfiles fields and values to be set>}
```

Note: {"Cmd":"SetProf", "AAA":bbb} shall set all the profiles' AAA to bbb.

On success the reader shall respond with:

```
{"Report":"SetProf",<error fields>}
```

AddProf: Adds a new **SpotProfile** to the list. Only non-default fields need to be included. The **SpotProfile** number may be omitted or set to zero.

```
{"Cmd":"AddProf",  
  <SpotProfiles fields and values to be added>}
```

On success the reader shall respond with:

```
{"Report":"AddProf",<error fields>,  
  "ID":<number of the added SpotProfile>}
```

DelProf: Deletes the listed **SpotProfiles**.

```
{"Cmd":"DelProf",  
  "ID":[<list of the SpotProfile IDs for deletion>]}
```

The **ID** default value ([0] meaning **ALL**) is not allowed to prevent accidental deletion of the Profiles.

On success the reader shall respond with:

```
{"Report":"DelProf",<error fields>}
```

6.6.2 SpotProfile fields

The following table lists the **SpotProfile** fields.

Field name	Value type	Default	Notes
DwnCnt	Number	-1	The number of times this SpotProfile shall be used to spot unique tags: If DwnCnt is < 0 (typically -1), then this SpotProfile will be used infinite times. If DwnCnt is zero, then do NOT use this SpotProfile . If DwnCnt is > 0 then decrement DwnCnt for each unique tag the SpotProfile has been used for.
EncodingType	"ALL", "GS1", "ISO", "SGTIN", "SSCC", "SGLN", "GRAI", "GIAI", "GSRN", "GSRNP", "GDTI", "CPI", "SGCN", "GINC", "GSIN", "GID", "USDOD", "ADI", "BIC" or AFIValue	"ALL"	EncodingType is used to select tags during inventory. ALL : Ignore the encoding type. GS1 : Report all GS1 encoded tags as indicated by the PC word. ISO : Report all ISO encoded tags as indicated by the PC word. AFIValue is a HexString. The AFI is set for ISO tags and is part of the PC word. All other values indicate a GS1 EPC which is part of the EPC encoding.
FirstSeen	Boolean	true	If true, the profile reports tags that are seen for the first time.
ID	Positive number	-	The SpotProfile ID
InterpretData	Array of Objects	[]	The array shall contain the interpretation objects as specified in 3.4.2.
LastSeen	Boolean	false	If true, the profile reports a tag no longer in the ReadZone . After the report, that tag is forgotten.
MBMask	An array of mask tuples	[[[]]]	An array of masks to be used on a memory bank read. The values are: Memory bank – number (0 to 3) StartBit – number Bit length of the mask – number Bit mask – HexString padded with zero bits (head and tail) to ensure 16-bit word alignment. Bit mask value – HexString padded with zero bits (head and tail) to ensure 16-bit word alignment. Example (mask on additional data in MB01 and in MB11): [[1,128,16,":FFFF",":1234"], [3,0,8,":FF",":11"]]

Field name	Value type	Default	Notes
Priority	Positive number	0	Priority of the profile. If a tag matches multiple profiles, the profile with the highest priority value will be used.
Read	An array of read tuples	[[[]]]	An array of read access instructions tuples. The values are: Memory bank – number (0 to 3) StartWord – number Words to be read – number Retry limit – number Example (MB10-TID and MB11-User memory): [[2,0,6,3],[23,0,16,1]]
ReadZone	Array of numbers	[0]	ReadZone(s) for which this SpotProfile applies. The value zero (0), the default, indicates that the SpotProfile applies to all the ReadZones.
ReportPC	Boolean	false	Set to true to report PC bits (including XPC).
ReportSensor	Boolean	false	Set to true to report tag sensor values based on the sensor alarm bit.
Seen	Boolean	false	If true, the profile reports tags that are seen repeatedly.
Write	An array of write tuples	[[[]]]	See 3.4.3 and 6.6.3 for details.

6.6.3 SpotProfile write fields

The **Write** field in the **SpotProfile**, see 6.6.2, specifies the write methods and values using an array of write instruction tuples. The tuple has the following values, in the order of the list:

Description	Type	Values
Memory bank to be written	Number	0 to 3
Start word	Number	-
Words to be written	Number	-
Retry limit	Number	The maximum number of retries for each write, check and lock operation.
Write method	Tuple of values	The write method has the following values: Method – string: "VAL", "RND", "COPY", "DATE", "DT" Write method parameters as specified in the next table.
Check	Boolean	The default is false; no check. When true the reader shall read the written data to confirm it was correctly written.

Description	Type	Values
Lock method	To be finalised	To be finalised

The following table provides the write method parameters:

Write method	Write method value(s)	Description
COPY	[<source MB number>, <source 16-bit word start>]	Copy data from another part of the tag. The default is [1, 0]. The MB is indicated with 0, 1, 2 & 3 representing MBs 00, 01, 10 & 11. Example (copy TID to UII/EPC): ["COPY",2,0]
DATE	String	Write a 16-bit word specifying the date. The value is a positive integer with zero indicating 1 January 1970. This provides dates until 2149-06-06. The date format is: "YYYY-MM-DD". Example: "2016-04-18" results in 16909.
DT	String	Write the 32-bit Unix Time (epoch) value as specified by ISO 8601. The time instance used shall be taken at the time the write command is executed. The DT format is: "YYYY-MM-DDThh:mm:ss.sssZ". The string may be shortened as specified by ISO 8601, for example "YYYY-MM-DDThh:mm".
RND	-	A random number of the size specified will be written and changed each time. Example: ["RND"]
VAL	binary	The exact binary value is written. The binary string shall be padded with zero bits when too short. Examples: <ul style="list-style-type: none"> ["VAL","kfjhksay9832rfk="] ["VAL",":91F8:E192:C6B2:F7CD:F6AD:F900"]

Note: Writing to a tag when other tags are also present in the **ReadZone** may be problematic. The use of an intelligent reader should be considered along with a well-designed **ReadZone** when writing tags.

6.7 StartRZ, GetActRZ, StopRZ

6.7.1 General

The **ReadZone** antenna configuration, power settings, duty cycles, triggers and SpotProfiles are set with the commands described in 6.4 and 6.6.

The reader functions shall be deactivated by default. The field **RdrStart**, see 6.3.2, configures the default start state of the reader.

When the reader is active the **ReadZones**, **Antennas** and **GPIO** shall behave as configured in 6.4, 6.5 and 6.6.

6.7.2 ReadZone activation

StartRZ: Activates the listed **ReadZone(s)**.

```
{"Cmd":"StartRZ","ID":[<list of ReadZone IDs to be activated>]}
```

The default value for **ID** is [0] which means all. {"Cmd":"StartRZ"} is therefore valid. It will start all **ReadZones** at once.

On success the reader shall respond with:

```
{"Report":"StartRZ",<error fields>}
```

GetActRZ: Lists the active **ReadZones**.

```
{"Cmd":"GetActRZ"}
```

On success the reader shall respond with:

```
{"Report":"GetActRZ","RZs":[<list of activate ReadZones>]}
```

StopRZ: Deactivates the listed **ReadZones**.

```
{"Cmd":"StopRZ","ID":[<list of ReadZones to be deactivated>]}
```

The default value for "ID" is [0] which means all. {"Cmd":"StopRZ"} is therefore valid. It will stop all **ReadZones** at once.

On success the reader shall respond with:

```
{"Report":"StopRZ",<error fields>}
```

6.8 ThisTag, ThisTagStop

The **ThisTag** command format is as follows:

```
{"Cmd":"ThisTag","Prof":[<SpotProfile numbers>...]}
```

The SpotProfile numbers are as specified in 6.6.

The default value for **Prof** is [0] meaning all. {"Cmd":"ThisTag"} is therefore a valid command executing **ThisTag** with all the configured profiles.

The **ThisTag SpotProfile** overrides all other **SpotProfiles** until the **ThisTag** is successfully completed or the **ThisTagTimeout**, see 6.3.5, occurs.

The **ThisTag** command may include the fields Mode and **TargetTags**, see 6.3.6, which shall apply for the duration of the **ThisTag** execution.

An error event shall be reported when **ThisTag** reaches its timeout without completing an inventory on a tag or spotting a tag.

```
{"Report":"ThisTag",<error fields>}
```

The **ThisTag** command shall activate the **ReadZone(s)**, as specified by the **ThisTag SpotProfile**, for the execution of the **ThisTag** and return all **ReadZone(s)** to their pre-**ThisTag** state.

ThisTag shall ignore all triggers of the **ReadZones** during the execution of the **ThisTag** command.

A **ThisTag** execution may be stopped with the following command.

```
{"Cmd":"ThisTagStop"}
```

On success the reader shall respond with:

```
{"Report":"ThisTagStop",<error fields>}
```

7 Reports

7.1 Error event report

The **Error** report message is used to report reader event errors.

The format of the **Error** message shall be as follows:

```
{"Report":"Error",  
  "ErrID":<error number>,  
  "ErrDesc":<description>,  
  "ErrInfo":<additional error information>}
```

7.2 Heartbeat

The **Heartbeat** report provides the status of the reader.

A **Heartbeat** shall be sent on the connection once it has been established. Thereafter the **Heartbeat** is sent every **HBPeriod**. No further heartbeats shall be sent if the **HBPeriod** is set to zero.

The format of the **Heartbeat** report is as follows:

```
{"Report":"HB","Seq":<sequence number>,<heartbeat field>...}
```

The value of **Seq** is a positive integer which increments by one with every **Heartbeat**. The size of this number is vendor specific (but should be at least 8 bits long); once the limit has been reached, the counter will restart.

Seq is optional.

Example:

```
{"Report":"HB","RdrName":"RAIN-123DEF","BootCnt":123456,  
  "TimeStamp":687652641.324}
```

Any combination of appropriate reader information and configuration fields (clause 6) may be included in the heartbeat. The **HBFields** field in 6.3.2 is used to specify which fields to include.

When **ReportHB** is set, see 6.5, then the GPIO fields are included in the **Heartbeat**.

7.3 Reader event report

The reader may report events unsolicited and at any time. The reports use the relevant command respond formats, e.g. errors, see 7.1, and **GPIO** changes, see 6.5. In the case where such an event is not specified by a command response the following report shall be used:

```
{"Report": "RdrEvent", <reader event field>...}
```

The GPIO event report has the following format, see 6.5:

```
{"Report": "RdrEvent", "GPIOs": [<GPIO tuple>...]}
```

There are currently no other reader events defined.

7.4 Tag spot report

The spot of a tag is reported by the reader with the following unsolicited message.

Note: The sequence is NOT important, and fields excluded have an empty or default value):

```
{"Report": "TagEvent", <error fields>, <TagEvent field>...}
```

The following **TagEvent** fields provides information about the spot. Optional fields are indicated by a † and †† which are both excluded by default. These fields can be included by using settings in 6.3.5† and 6.6.2††.

Fieldname	Value type	Default	Notes
20248†	Object	-	ISO/IEC 20248 interpreted data, see 3.4.2.3.
Ant†	Number	-	Antenna ID the tag was spotted with.
DT†	String	-	Use ISO 8601 format: YYYY-MM-DDThh:mm:ss.sssZ No time zone means local time.
DwnCnt	Number	-1	Defined in 6.6.2. Report after decremented. Only report if ≥ 0.
PC††	HexString	-	PC, XPC_W1 & XPC_W2.
Phase†	Number	-	Phase of the tag signal.
Prof†	Number	-	SpotProfile ID used to read the tag.
Range†	Number	-	Distance from tag to reader in millimetres.
RSSI†	Number	-	Received signal strength in dBm.
RZ†	Number	-	ReadZone ID the tag was spotted in.
Spot	"FirstSeen", "Seen", "LastSeen", "ThisTag"	"FirstSeen"	Spot may be omitted for FirstSeen spots.

TagIndicator	Array of Strings	[]	XPC tag indicator interpretation values, see 3.4.6.
TimeStamp†	Number	-	The epoch date-time value. Note: epoch is in seconds. A smaller fraction of time is indicated by the decimal fraction of the number, e.g. 2143235.234 indicates 234 ms after the epoch second 2143235.

The following **TagEvent** fields specify tag data. Tag data errors (read, write and write check) shall be indicated by setting the field value to null.

Fieldname	Value type	Default	Notes
EPC or UII	Binary	-	The field name for inventoried data: EPC for tags with T=0 in PC word UII for tags with T=1 in PC word
MB††	Array of read tuples	[]	Memory bank data read shall be reported as an array of objects. The objects shall contain the following fields: "ID":<memory bank number: 0 to 3> "Start":<start word of the data – number> "Data":<binary data> The data value shall be set to null when a read error occurred. See below for examples.
SensorAlarm††	Boolean	false	Sensor alarm is obtained via XPC word during inventory or can be read from bit 214h in XPC_W1. Only report when true.
SSD††	HexString	-	Simple sensor binary data. Only report when present and selected.

Examples: The default (and shortest) spot, which is a **FirstSeen Spot**:

An ISO tag: {"Report":"TagEvent","ErrID":0,"UII":"","0123:4567:89AB:CDEF"}

A GS1 tag: {"Report":"TagEvent","ErrID":0,"EPC":"","0123:4567:89AB:CDEF"}

Example: **Seen Spot**:

```
{"Report":"TagEvent","ErrID":0,"DT":"2017-09-11T13:06:01.000",
  "Spot":"SEEN","InvCnt":25,"PC":"","3592",
  "UII":"","0123:4567:89AB:CDEF:89AB:CDEF",
  "MB":[{"ID":3,"Start":0,"Data":"","2323:2323:2323:2323"},{...}]}
```

Example: **Seen Spot** with an error (note the application knows the intended operation and as such knows the error type):

```
{"Report":"TagEvent","ErrID":34,"DateTime":"2017-09-11T13:06:01.000",
  "Spot":"SEEN","InvCnt":25,"PC":"","3592",
```

```
"UII":":0123:4567:89AB:CDEF:89AB:CDEF",  
"MB":[{"ID":2,"Start":0,"Data":null}]}
```

Note: in this example no XPCs were returned.

8 Proprietary functions

Proprietary functions are implemented with proprietary commands, fields and field values. Proprietary fields shall start with an underscore and may be used in all messages.

An example of a proprietary field in the **Config** message:

```
{"Cmd":"SetCfg","_Led":"Red"}
```

An example of a proprietary message:

```
{"Cmd":"_VendorCmd","_VendorValue":100}
```

Proprietary field values should be described in the vendor reader description.

9 Reader documentation

It is recommended that a vendor provides a reader specification which includes the information fields and their values, and a list of all the commands, fields, and field values a reader supports.

Annex A Abbreviations

Addr	Address
AirProt	Air Protocol
Ant(s)	Antenna(s)
Cfg	Configuration
Cmd	Command
Cnt	Count
CRC	Cyclic Redundancy Check
Date	Date and Time are the 32-bit Unix Time (epoch) value as specified by ISO 8601 unless otherwise specified.
Del	Delete
Desc	Description
DT	Date and time
DwnCnt	Down Count
Err	Error
FreqReg	Frequency Regulation(s)
HB	Heartbeat
ID	Identifier/Index/Number
Info	Information
Int	Interval
Inv	Inventory
IP	Internet protocol
Len	Length
MB	Memory bank
Msg	Message
Net	Network
PC	Protocol Control
Prof(s)	SpotProfile(s)
Pwr	Power
Rdr	Reader
RSSI	Read Signal Strength Indicator
RZ	ReadZone
SN	Serial number
Temp	Temperature
Time	See Date.
TO	Timeout
Val	Value

Annex B Error numbers and descriptions

The following table provides defined errors.

Number (ErrID)	Description (ErrDesc)	Optional information (ERRInfo)	Notes
0	No error(s)	-	No error on the command when in response to a command. Error condition cleared when reported as an event.
1	Bad message	JSON string with the bad message	The JSON is not correct or the message is missing parts.
2	CRC error	JSON string with actual CRC calculated	-
3	Buffer full	JSON number with the receive buffer size	-
4	Response too big	JSON number with the transmit buffer size	This may happen when a reader uses a fixed size transmit buffer or runs out of memory.
5	Memory overrun	JSON string: <which memory>	-
6	Reader too cold	JSON string: <which component>	This may result in inaccurate calibration/settings.
7	Reader hot	JSON string: <which component>	This does NOT result in a functional termination or malfunction.
8	Reader too hot	JSON string: <which component>	This will result in a functional termination or malfunction.
9	Message length error	Number of bytes missing.	Too many bytes is indicated with a negative value.
20	Command not supported	JSON string showing which command is not supported	-
21	Field not supported	Array of strings of not supported fields	-
22	Field value not supported	Array of strings of fields of which the value is not supported	-
23	Field value changed	Array of strings of fields of which the value is not supported	The reader may change requested field values to a more appropriate supported value.
30	GPIO toggle value the same	Array of numbers identifying the GPIO IDs with the problem	A toggle could not be performed.
31	GPIO not settable	Array of numbers identifying the GPIO IDs with the problem	The GPIO is not an output, D2A or register.

Number (ErrID)	Description (ErrDesc)	Optional information (ERRInfo)	Notes
25	Trigger not an input switch	Array of number identifying the offending GPIO	-
30	SpotProfiles full	-	-
31	SpotProfile error	Array with: JSON number: SpotProfile number, JSON string: <more info>	A SpotProfile resulted in an air protocol configuration error.
32	Illegal SpotProfile	Number array listing the illegal SpotProfiles	-
33	ThisTag timeout	String stating one of the following: <ul style="list-style-type: none"> "No tags inventoried." "No SpotProfile triggered." 	No tags were spotted during the ThisTag duration.
34	Spot error	String describing the error	The spot event could not be completed.
40	ReadZones full	-	-
41	ReadZone start error	Array of which the first element is a string describing the start error, followed by numbers indicating the ReadZones with a start error	-
42	ReadZone definition error	An array listing the offending fields	-
≥1000	<Proprietary errors>	<Vendor specific>	<Vendor specific>

Annex C RAIN RFID 101

This annex provides a summary of air-protocol interrogation and the tag memory organisation.

C.1 General tag types

The following general tag type may be present in the ReadZone:

SIMPLE: Access to these tags is limited to inventory where only the PC bits and the UII/EPC are read.

READ: More data than the UII/EPC will be read from the tags. It takes longer to complete a tag read interrogation. Often these actions reduce the read range of the tag.

WRITE: Data will be written to the tags. Tags need more electric power to store the data permanently. It takes longer to complete a tag write interrogation. Write actions reduce the read range of the tag.

BAP: Battery assisted tags may be in the ReadZone. The battery provides electric power for the tag intelligence (and sensors), so ensuring the optimal read range for all types of interrogations. Battery assisted tags have dedicated commands and modulation to optimise the use of such tags.


SIMPLESENSOR: Tags may provide simple sensor data. Simple sensor data is added to the UII/EPC during inventory as indicated by the protocol

SENSOR: Tags may provide sensor data.

CRYPTO: Crypto tags may be in the ReadZone. Crypto tags comply with ISO/IEC 29167. Crypto tags have the ability to perform cryptographic functions for tag security outcomes. Cryptographic functions require more power and time to complete.

C.2 Tag memory organisation

RAIN tags have the following memory map:

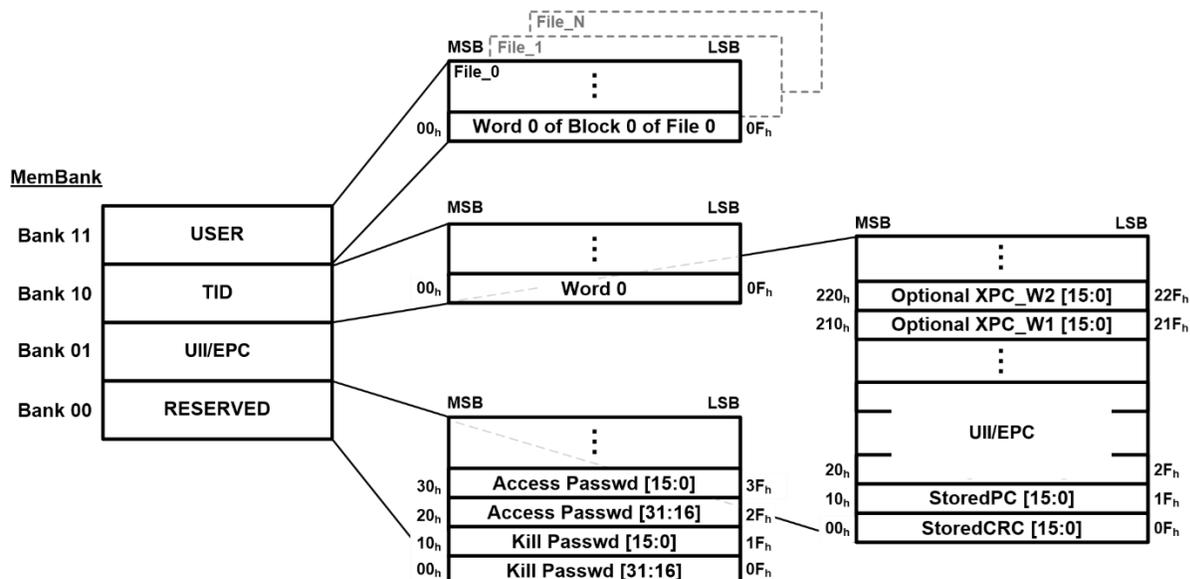

Note: MB and MemBank are abbreviations of "memory bank".

The Protocol Control (PC) word and eXtended PC (XPC) words 1 and 2 provide information on the data received and available on the tag. It also indicates the security access methods for the tag. The PC and optional XPC words are transmitted to the reader during inventory.

Memory Bank 11 (user memory) may be organised in separate data blocks called files. The default configuration is one file, called file 0. The Tag manufacturer chooses where a Tag stores its FileType and FileNum data. The Tag manufacturer also chooses the file-allocation block size (from one to 1024 words). User memory and the files in it may be encoded according to the GS1 EPC Tag Data Standard or to ISO/IEC 15961/15962 and ISO/IEC 20248.

GS1 tags and ISO tags have the same memory bank structure. They do differ in the content of banks 01 (EPC/UII) and 11 (User Memory). The following examples illustrate the differences.

Simple ISO tag with 128 bits UII

MB-01 PC Bits					MB-01 UII
UII len	UserMem	XI	Standard	AFI	UII as specified by the AFI
01000	0	0	1 (ISO)	8 bits	128 bits as per UII len

Simple GS1 tag with 96 bits EPC

MB-01 PC Bits					MB-01 UII
EPC len	UserMem	XI	Standard	RFU	EPC as specified by GS1
00110	0	0	0 (GS1)	0x00	96 bits as per EPC len

GS1 or ISO tag with ISO/IEC 15961 & 15962 defined User Memory data

MB-01 PC Bits					MB-01 UUI	MB-11 User Memory		
UUI/EPC len	UserMem	XI	Standard ISO GS1	AFI/RFU	UUI/EPC	DSFID	Data fields according to ISO/IEC 15961 & 15962	
00110	1	0	1 or 0	0x00	96 bits	8 bits	≥ 0 bits	

ISO tag with ISO/IEC 20248 defined User Memory data

MB-01 PC Bits					MB-01 UUI			MB-11 User Memory
UUI Len	UserMem	XI	Standard	AFI	DAID	CID	Optional company assigned fields	signature, timestamp Optional company assigned fields
00110	1	0	1 (ISO)	0x92	32, 40 or 48 bits	16 bits	48 bits	≥ 256 bits

GS1 tag with ISO/IEC 20248 defined User Memory data

MB-01 PC Bits					MB-01 UUI	MB-11 User Memory			
EPC len	UserMem	XI	Standard	RFU	EPC	DSFID	DAID	CID	Signature, timestamp & optional company assigned fields
00110	1	0	1 (GS1)	0x00	96 bits	0x11	32 or 40 bits	16 bits	≥ 0 bits

ISO tag with a simple sensor

MB-01 PC Bits					MB-01 UUI	MB-01 Simple Sensor Data	XPC
UUI len	UserMem	XI	Standard	AFI	UUI as specified by the AFI	As specified by ISO	Simple sensor bit set
01000	0	1	1 (ISO)	8 bits	128 bits as per UUI len	32 or 48 bits	16 bits

C.3 Air-protocol summary

Tags are energised by the reader. Once energised a tag will listen for a command from the reader. If the command is intended for the tag, the tag will respond by modulating and reflecting the signal received from the reader. The commands form part of three basic operations:

1. **Select.** The operation of choosing a tag population for inventory and access. A Select command may be applied successively to select a particular tag population based on user-specified criteria.
2. **Inventory.** The operation of identifying tags. Inventory comprises multiple commands. The result is the PC/XPC word(s), UUI/EPC, and CRC from the tag. The PC/XPC bits inform the reader on the availability and access methods of additional information (e.g. sensor and crypto tags).

Crypto tags inform the reader that they have encrypted information and which crypto suite is to be used to access the information. The application must provide the keys and use the indicated crypto access method to gain access to the protected data and/or verify the tag and/or the data.

3. **Access.** The operation of communicating with (reading from and/or writing to) a tag. An individual tag must be uniquely identified prior to access and a tag access handle obtained. Access comprises multiple commands (using the tag access handle) with multiple results and directed by the application.

C.4 Sessions and tag targets

The Sessions function is an expert air protocol method to add an additional layer of tag separation, where readers are located close together. Other methods are RF shielding and frequency separation. Sessions may also be used to limit the number of times you read the same tag.

The Targets function is an expert air protocol method to silence tags already interrogated. This is very useful in preventing denial of service due to tag-flooding in the ReadZone. Tag-flooding is when there are too many tags for the reader to cope with. It is also very useful to control battery assisted tag responses, since battery assisted tags may have substantially longer read ranges.

C.5 Air protocol parameters

The air protocol parameters are used to optimise the speed and reliability of the over-the-air communication channel from the reader to the tag and from the tag to the reader. The over-the-air communications are influenced by various environmental and use factors in the read scenario. It must be noted that a tag has very little power available (since it harvested electric power from the reader radiation) and a small chip. It is therefore limited in the speed and intelligence it can apply to decode reader radio messages. Readers, on the other hand, can have all the electric power and intelligence they need to decode the tags' radio messages.

The following air protocol parameters are used

1. **Q:** The Q value is used to optimize the reading speed in relation to the number of tags simultaneously under the field. The higher Q values are good for large numbers of tags while lower values are good for small populations of tags. Valid Q values are between 0 and 15 but typical values range between 3 and 7. Reader vendors typically implement an automatic Q value adjustment algorithm to adapt the reading speed dynamically to the tag population.
2. **Tari:** Tari is a factor used to determine the data link speed to the tag.
3. **BLF:** BLF is a factor used to determine the data link speed from the tag.
4. **Modulation:** The modulation specifies the method used to put data on the RF carrier. RF environments and use cases differ, requiring different modulations methods.
5. **Data encoding:** Data encoding specifies the method for encoding the data onto the carrier (as specified by the modulation parameter).
6. **Preamble:** Long or Short. Long is useful for noisy areas.
7. **RSSI:** Receive Signal Strength Indicator - An indicator of how well the reader has seen the tag. Should be interpreted with read count.
8. **Phase:** An RF indicator to assist in the optimisation of the read scenario.

Parameters 2 to 6 specifies the radio modulations. These parameters influence the air link speed and robustness against radio noise. Typically, a higher speed will result in a reduced robustness. Each read scenario should be evaluated carefully for the optimal settings. Successful reader vendor implementations tend to automate and perform this evaluation frequently.

C.6 Tag passwords

For future releases.


Annex D Tag spot example implementation

This example implementation makes use of the following data structures:

1. The **SpotProfileList** is ordered in decreasing priority. This can easily be achieved using linked lists.
2. A **SpotJournal** contains all the **Spots** of interest; a **Spot** which matched a **SpotProfile** and has not triggered the **LastSeenTimeout** or has been deleted to make space for a newer spot. Each **Spot** in the **SpotJournal** has two timestamps; **LastInventoryTime** and **LastReportTime**.

Note: This is only one of many ways to organise the *ToDo* list of **SpotProfiles** and process an inventoried tag as specified by the relevant **SpotProfile**. Reader vendors are encouraged to seek and implement the best methods as a competitive edge.

For this example, adding **SpotProfiles**, processing commands and transmitting **Spots** and command responses are assumed to happen at their own time in separate processing streams.

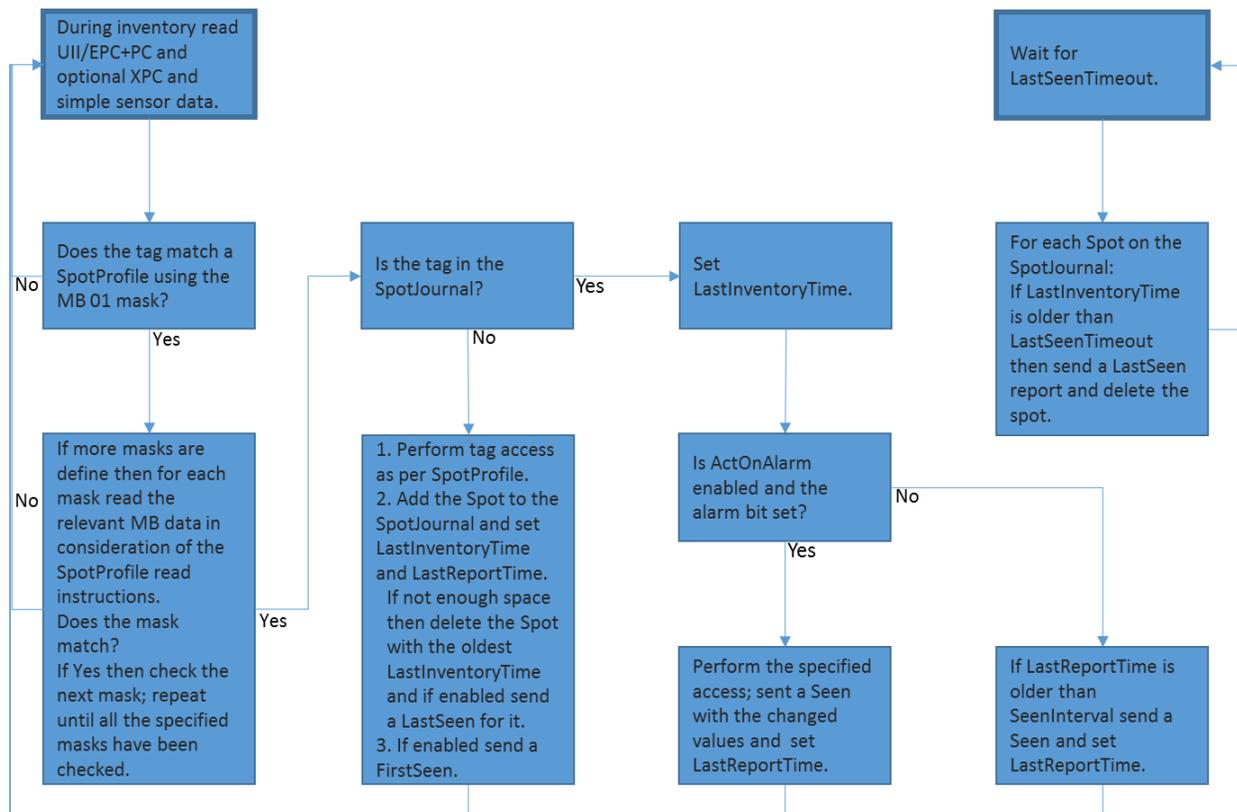

The following suggestions are made for a full featured implementation:

1. A multicore control should be used where the cores are assigned to independently perform the following tasks:
 - a. Drive the air-protocol.
 - b. Perform the configuration and connectivity functions.
 - c. Perform the LastSeen pruning and data decoding functions.
 - d. Perform the crypto functions.

2. The **SpotProfileList**, **SpotJournal** and communications buffer are dual access memory locations controlled with semaphores.
3. The **SpotProfileList** and **SpotJournal** are dual-linked lists to assist list traveling optimisation. Fixed format tables are wasteful in memory and in processing resources.

Lean implementations should optimise features against the intended read scenario(s). Note that all the features, except for basic reading and **FirstSeen**, are optional. Defaults have been chosen to support lean implementations.

Annex E Contributors

This guideline is developed and maintained by the RAIN Developers Workgroup with the following experts contributing:

Stefano Coluccini (Co-Chair up to 2018-04)	CAEN RFID srl
Thomas Frederick	Clairvoyant Technology LLC
Bryan Berezdivin	Impinj, Inc.
Matt Robshaw	Impinj, Inc.
Rob Collins	Impinj, Inc.
Dan Ratner	JADAK a Novanta Company
Harry Tsai	JADAK a Novanta Company
Harinath Reddy	JADAK a Novanta Company
Georg Michel	Kathrein
Bertus Pretorius (Author, Original Proposal, and editor, Co-Chair from 2018-04)	LicenSys
David Ciampi	LicenSys
Lars Thuring (Chair)	Logopak Systeme GmbH & Co. KG
John T. Armstrong	MonsoonRF, Inc.
Danny Haak	Nedap Retail
James Goodland	NXP
Dene Taylor	SPF-Inc
Mattias Edlund	TagMaster AB

ABOUT RAIN RFID ALLIANCE

The RAIN RFID Alliance is an organization supporting the universal adoption of RAIN UHF RFID technology. A wireless technology that connects billions of everyday items to the internet, enabling businesses and consumers to identify, locate, authenticate and engage each item. The technology is based on the EPC Gen2 UHF RFID specification, incorporated into the ISO/IEC 18000-63 standard. For more information, visit www.RAINRFID.org. The RAIN Alliance is part of AIM, Inc. AIM is the trusted worldwide industry association for the automatic identification industry, providing unbiased information, educational resources and standards for nearly half a century.



RAIN RFID Alliance

One Landmark North
20399 Route 19
Cranberry Township, PA 16066

Visit the RAIN RFID website – RAINRFID.org. If you are interested in learning more about the RAIN RFID Alliance, contact us at info@rainrfid.org.